4. Disassembly and Reassembly

4-1 Removal of CARRYING HANDLE & COVER-DUST ASS¡¯Y

1) Lift CARRYING HANDLE, detach it with a flat head driver.

2) Detach GRILLE-BACK, pushing the hook. and then release the screw on COVER-BACK and detach it with a flat head driver.

3) Widen the space between the jionts of COVER-DUST ASS'Y, and detach it.

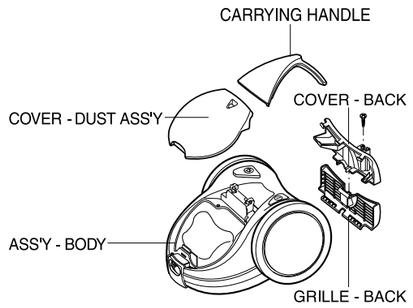

4-2 Disassembly of COVER-DUST ASS¡¯Y

Release 4 screws and detach ASS'Y-INDICATOR, CAP-DAMPER.

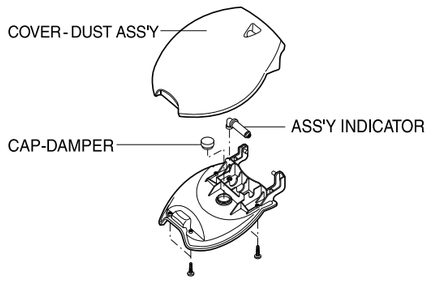

4-3 Disassembly of ASS¡¯Y-BODY MID

After detaching GRILLE-BACK and COVER-BACK, release 6 screws and disassemble ASS¡¯Y-BODY MID.

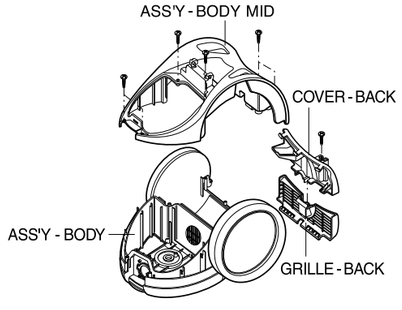

4-4 Removal of ASS¡¯Y-CASE

1) After removing BUTTON-CORD REEL and SPRING-BUTTON CORDREEL, release the screw on ASS¡¯Y-CASE and remove it from main body.
2) To remove ASS¡¯Y-CASE wholly from main body, disconnect WIRE/HARNESS-FRONT from ASS¡¯Y-RBA.
3) To remove PBA-MAIN. release the screw on PBA-MAIN.

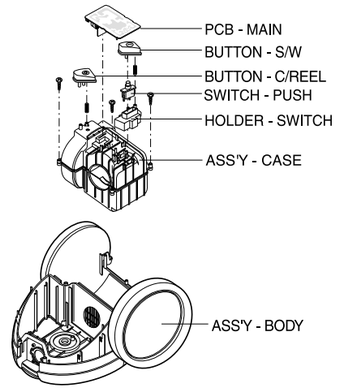

4-5 Removal of COVER-FRONT

Release the screw on CAP-FRONT and then detach COVER-FRONT

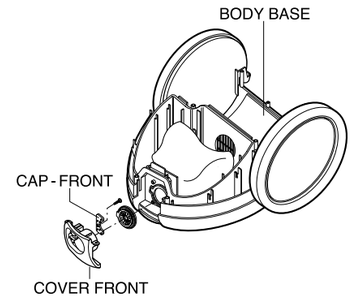

4-6 Removal of BAND-BODY

Detach BAND-BODY L,R from main body.

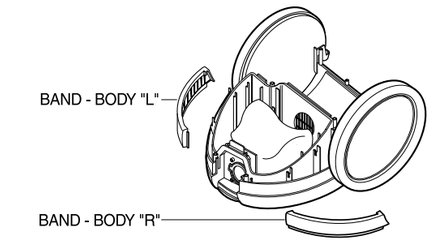

4-7 MOTOR REPLACEMENT

1) Disassemble the CASE-UP and CASE-LOW.

2) Release 4 screws on the ASS¡Ÿ-CASE MOTOR, and asparate CASE-MOTOR F and CASE-MOTOR B.

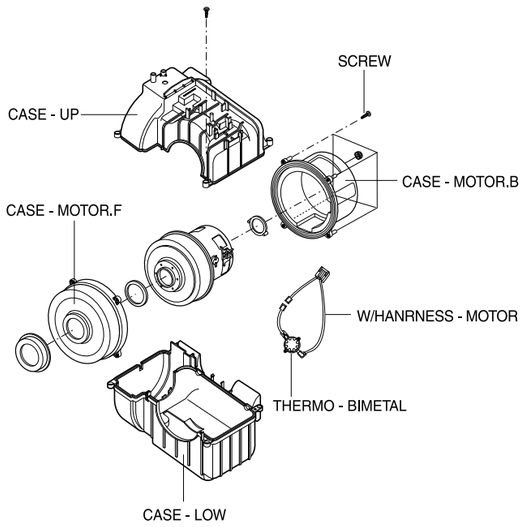

4-8 Cord-Reel Replacement

1) Release the hook on ASS¡Ÿ-CASE and separate CASE-UP from CASE-LOW.

2) Separate CORD-REEL ASS¡Ÿ from ASS¡Ÿ-CASE.

3) Hold CORD-REEL and wind the power cord to the left 5~6 times.

4) After winding, assemble the CORD-REEL to the main body.

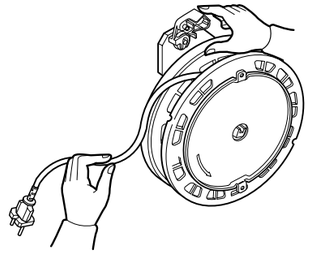

MEMO